



www.littletikes.com

631245

XIM631245M-1 -9/12

ENGLISH

COZY SWING™

Ages: 2 years and up

Please save sales receipt for proof of purchase.

WARNING **ADULT ASSEMBLY REQUIRED.**

Failure to follow these instructions may create a strangulation hazard. The Cozy Swing is designed as a replacement for seats on a swing set and is not intended to be attached to any other structures. The chain on the swing should attach to hardware on the swing set that has a nylon bushing (G) where the hook (not included) will pivot. If this hardware is not present on your set, you must add hooks with this bushing. This product is intended for indoor or outdoor family domestic use only.

CAUTION: The Cozy Swing chain should not be hung on a stationary hook (without a nylon bushing). The metal chain will rub against the metal hook and result in premature wear.

WARNING

- Keep these instructions for future reference.
- Observing the following statements and warnings reduces the likelihood of serious or fatal injury.
- To prevent serious injury, children must not use the equipment until properly installed.
- Falls onto hard surfaces can result in head or other serious injuries. Never place on concrete, asphalt, wood, packed earth, grass or other hard surfaces. Carpet over hard floors may not prevent injury. Always use protective surfacing on the ground under and surrounding the playground equipment according to the enclosed "Consumer Information Sheet for Playground Surfacing Materials." Maximum fall height protection up to 7 feet (2.1 m) required.
- Place this product on level ground, at least 6' (1.8 m) away from any object. Objects to be avoided include, but are not limited to, fences, buildings, garages, houses, overhead branches, laundry lines, or electrical wires.
- Swing seat should be hung no lower than 8" (20 cm) from the ground.
- The seat should be hung at least 15" (38 cm) from the side of the swing set or from other swings. It is recommended that the orientation of the assembled product be such that direct sunlight is minimized on surfaces intended for standing or sitting.
- Attachment points should be 18" (45 cm) apart from each other.
- Swing seat should not swing to within 6' (1.8 m) of any object in front of or behind it. Objects to be avoided include, but are not limited to, fences, buildings, garages, houses, overhead branches, laundry lines or electrical wires.
- Do not attach this product to other to-fro swinging components such as, but not limited to, swings, trapeze bars, trapeze rings, gliders or upper body components such as horizontal ladders.
- This product is intended for use by children ages 2 years old and up. Maximum weight limit 60 lbs. (27.2 kg).
- Adult supervision required. Do not leave children unattended.
- Only one rider should be allowed on the swing at one time.
- Dress children appropriately: avoid loose-fitting clothing such as ponchos, scarves, etc. that are potentially hazardous while using this equipment.
- Instruct children to remove their bike or other sports helmet before playing on this product.
- This product is intended for outdoor domestic family use only.
- Instruct children on proper swing use for their safety:
- Do not twist chains. Do not swing empty seats.
- Children should keep hands free of objects, inside of swing, and hold onto the ropes.
- Do not get off the swing while it is in motion.
- Do not walk too close to, in front of, behind, or between moving items.
- Always wear well-fitting shoes while swinging.
- Always sit with full weight in the center of the seat.
- Do not twist chains or ropes or loop them over the top support bar since this may reduce their strength.

- Do not use the equipment in a manner other than intended.
- Do not allow children to climb on product when product is wet.
- Instruct children not to attach items to the product that are not specifically designed for use with the product such as, but not limited to, jump ropes, clotheslines, pet leashes, cables and chains, as they may cause a strangulation hazard.

MAINTENANCE

WARNING: Failure to perform periodic checks could cause this product to overturn or cause a fall.

The following checks should be performed at the beginning of each season and twice monthly during the usage period:

- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instruction.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace if any of these conditions exist.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
- Take this product indoors or do not use when temperatures fall below 0°F/-18°C.

DISPOSAL

- Disassemble and dispose of equipment in such a manner that no hazardous conditions, such as but not limited to, small parts and sharp edges, exist at the time equipment is discarded.

CONSUMER SERVICE TOLL-FREE NUMBER:

United States:

www.littletikes.com

1-800-321-0183 Monday - Friday

The Little Tikes Company

2180 Barlow Road

Hudson, OH 44236

E-mail: littletikes.cares@littletikescare.com

United Kingdom:

www.littletikes.co.uk

Little Tikes

MGA Entertainment (UK) Ltd


50 Presley Way

Crownhill

Milton Keynes, MK8 0ES

Bucks, UK

E-mail: Info.LittleTikes@mgae.com

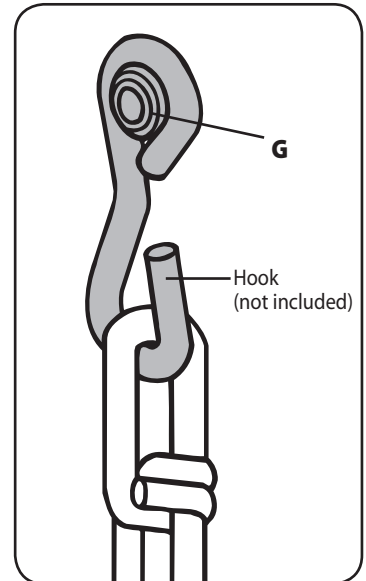

Printed in China. D.R.©2011 The Little Tikes Company

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes. Please keep this address and packaging for reference since it contains important information. Contents, including specifications and colors, may vary from photos depicted on package. Instructions included. Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be either replacement of the defective part of the product or refund the purchase price of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A. and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/ states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



Visit our website at
www.littletikes.com
to register your product online!

0912-0-E/INT

